


NWQ³

USERS GUIDE

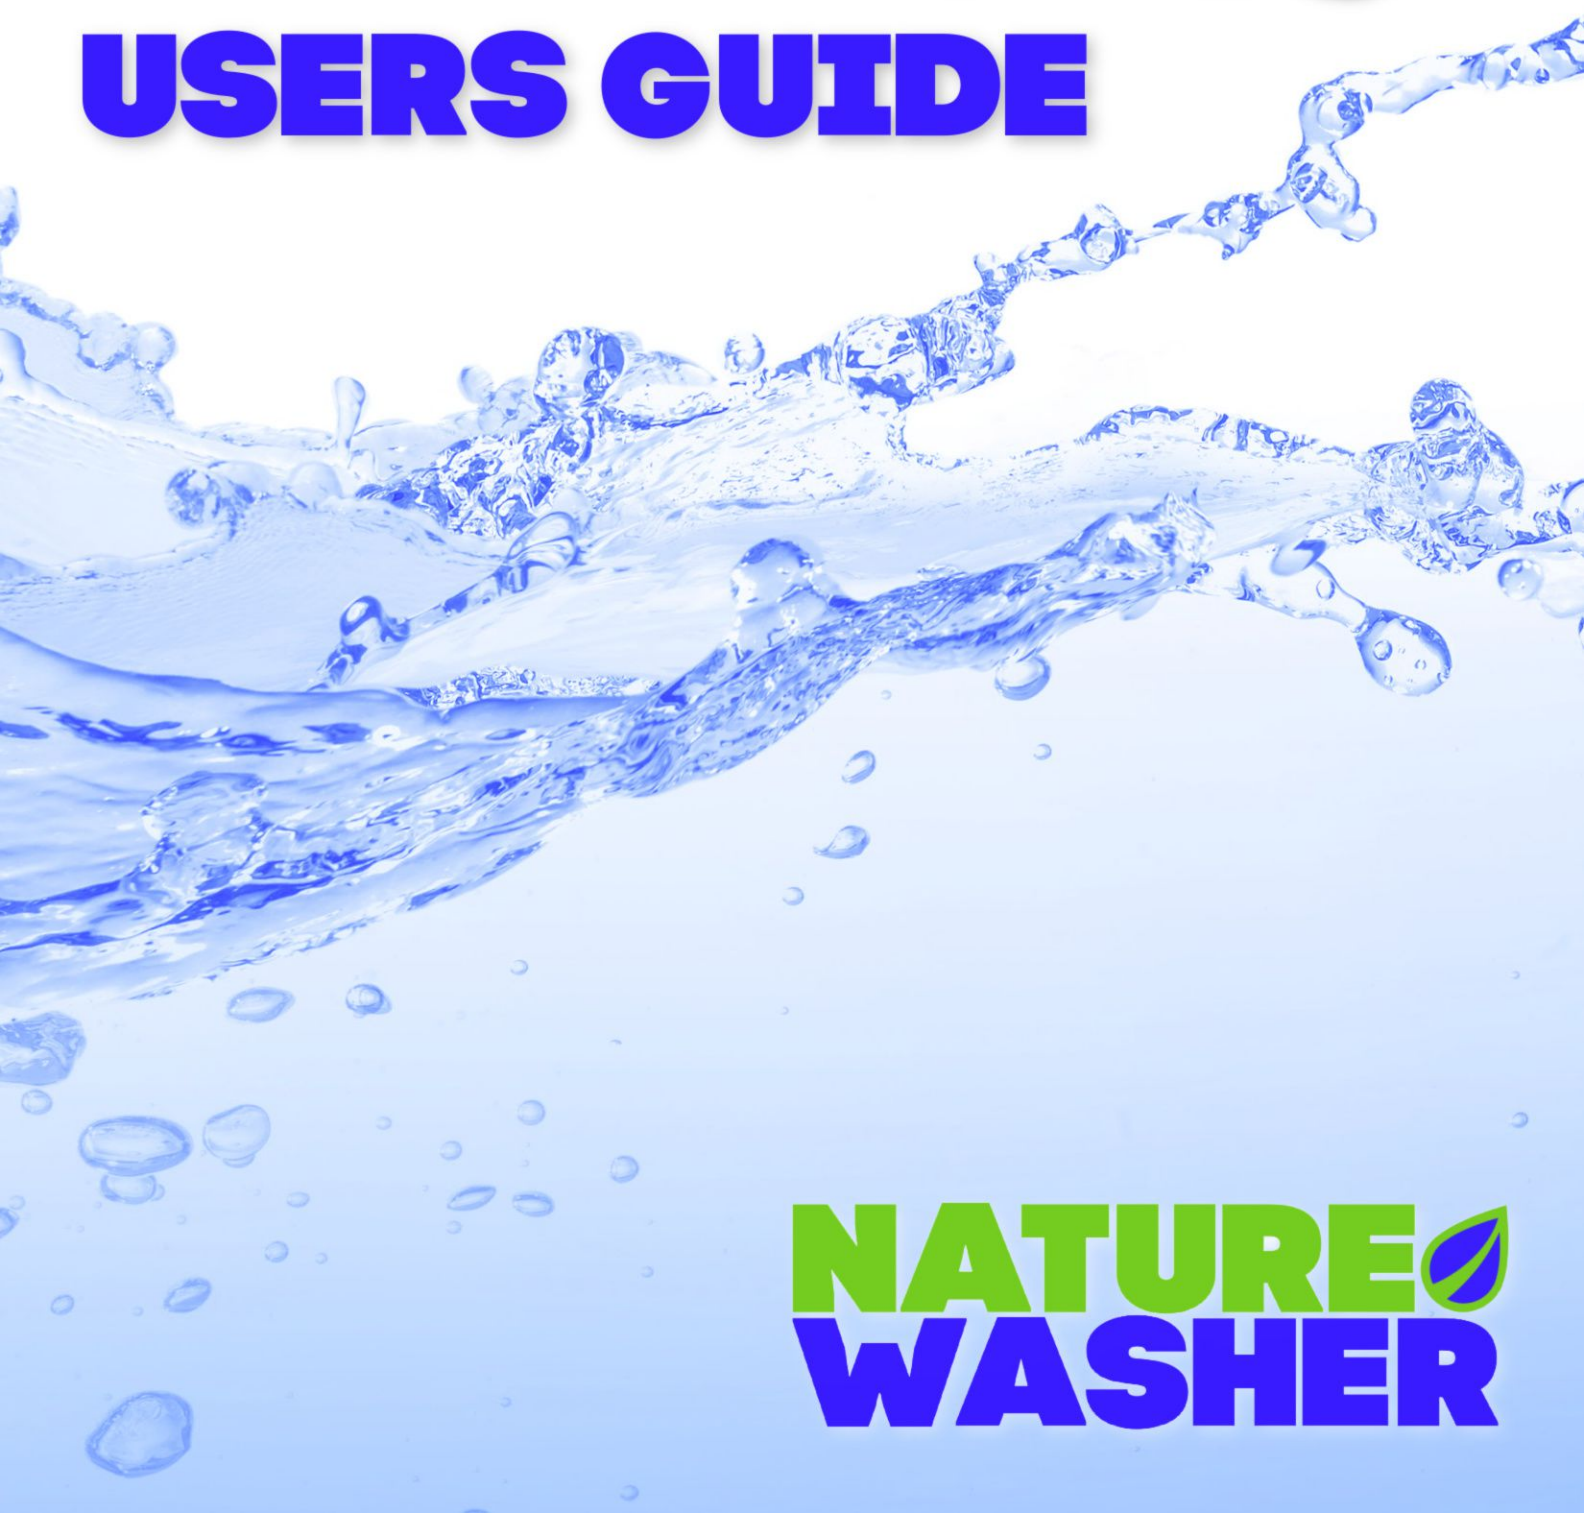

NATURE 
WASHER

PRODUCT INTRODUCTION

Simplify Your Routine, Save Loads of Money & Live Healthier with Award Winning & Lab Proven Technology!

Say goodbye to toxic chemicals and laundry detergent cover-ups! Experience chemical free purifying power with the all new and improved NatureWasher Laundry and Cleaning System. NatureWasher uses patented, hospital trusted cleaning technology that works with your existing washing machine transform cold tap water into a powerful cleaning agent. By simply attaching to your existing residential style washing machine, NatureWasher uses your home's water supply to safely generate a super charged H₂O solution to deep clean, lift dirt and destroy bacteria on your clothing, carpets, surfaces and more - without the use of laundry detergent or hot water!

Featured Benefits:

- NatureWasher quickly and easily attaches to your existing washing machine in 15 minutes or less with little-to-no maintenance needed.
- NatureWasher works automatically with your homes current cold water supply - no professional plumbing experience or fitting required.
- NatureWasher uses hospital trusted ozone laundry technology, specifically designed for home use with nearly any residential style washing machine.
- NatureWasher effectively deep cleans laundry and more without toxic chemicals or hot water.
- Unlike detergent, NatureWasher is lab tested and proven to destroy germs and bacterial from your laundry in as little as 5 minutes. This includes bacteria from E.Coli, Staph Infection and more!
- NatureWasher saves the average family of four \$700 or more on annual laundry detergent and hot water costs!
- NatureWasher is a chemical free device and is perfect for sensitive skin!

WASHING MACHINE CLEANING

Remove the "gunk" buildup caused by detergents by deep cleaning before using the NatureWasher® to ensure that you are getting the best performance out of your unit and will extend the life of your washing machine. This requires vinegar, baking soda and a rag or cloth.

Top Load Instructions:

- 1) Select hot water on the largest load setting. Add 4 cups of vinegar and let the machine agitate for 1 minute.
- 2) Add 1/2 cup baking soda and allow machine to run again for 1 minute to mix up the baking soda. Pause the washer after 1 minute and allow the solution to sit for 1 hour. This gives the solution time to break down all the residue. Continue the wash cycle after 1 hour is complete.
- 3) After the rinse cycle is finished, run another hot wash cycle on the largest load setting and let it run completely through.
- 5) After proper installation (see install instructions), run the NatureWasher with no laundry on a large load, cold water setting to complete the purifying process.

Front Load Instructions:


- 1) Start by removing all mold/mildew from the door seal. This will require the use of vinegar and a rag. An old toothbrush is also a great tool for cleaning crevices.
- 2) Once the door seal is cleaned, remove the soap dispenser tray from the machine and clean it thoroughly using vinegar and a rag. Be sure to also clean the inside of the machine as well (the slot where the tray was removed from). Once these are cleaned, replace the soap tray.
- 3) Add 1/2 cup of baking soda directly into the washing tub of the machine and then close the door. Slowly pour 4 cups of vinegar into the soap dispenser, allowing it to drain down into the tub.
- 4) Select hot water on the largest load setting and allow it to fill up. Then, pause the washer after 1 minute and allow the solution to sit for 1 hour to break down detergent residue. Continue the wash cycle after 1 hour is complete.
- 5) After rinse cycle is finished, run another hot wash cycle on the largest load setting and let it run completely through.
- 6) After proper installation (see instructions), run the NatureWasher with no laundry on a large load, cold water setting to complete the purifying process.

USE AND SAFETY

Please read carefully before installation:

- Disconnect the power cord before servicing.
- Maximum water inlet pressure should not exceed 100 PSI
- Use only the new hose supplied with your NatureWasher when connecting it to your washing machine. We also recommend replacing any existing washing machine hose that is more than 2 years old.
- The NatureWasher should always be horizontally mounted with the included bracket. Do not mount the EcoWasher vertically, upside down or at an angle.
- NatureWasher works normally in temperatures ranging from 32 degrees - 172 degrees. Always use a cold water cycle for best results.
- Water treated by the NatureWasher is skin and food safe, but is not intended or suggested for drinking or injecting.
- NatureWasher requires 100-240V/50-60Hz power on a 15amp fuse or circuit breaker.
- A dedicated electrical outlet circuit, equipped with an approved GFCI outlet is recommended for supplying power to your NatureWasher.
- Never use an extension cord or power adapter other than the one provided with your NatureWasher.
- Important - Water Pressure of 20PSI - 100PSI is required for correct operation of the NatureWasher and for adequate disinfection.
- Water quality may affect the performance of your NatureWasher. If you have hard/well water, it is recommended to use a water softener or other pre-filter.
- Never install the NatureWasher in an area where water could freeze. In the event where your piping may freeze, you should disconnect the unit from your washing machine to avoid damage.

PRODUCT DIAGRAM

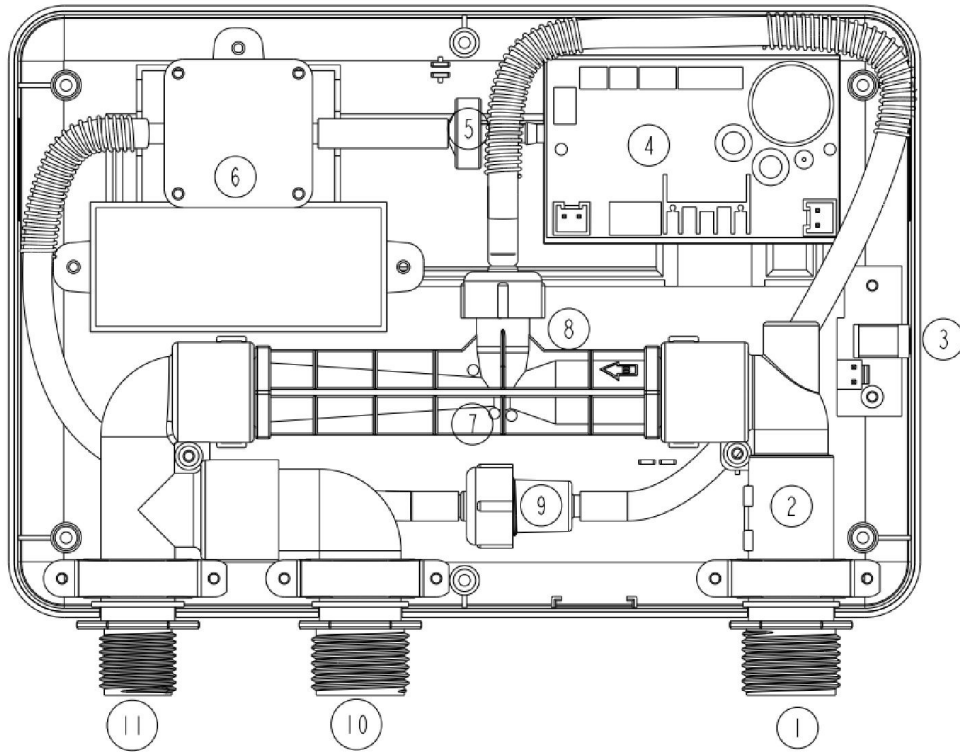

- | | |
|------------------------|----------------------------|
| 1 - Water Inlet (3/4") | 6 - Oxidizing Module |
| 2 - Water Flow Switch | 7 - Venturi Tube |
| 3 - Power Supply | 8 - LED Light Bar |
| 4 - Control Board | 9 - Check Valve (2) |
| 5 - Check Valve (1) | 10 - Water Outlet (3/4") |
| | 11 - Auxiliary Hose (1/2") |

WASHING MACHINE INSTALLATION

- 1) Choose an area on your wall near your washing machine for installation. This area should close to a power outlet and your home's water inlet (where your current laundry hose is located.)
- 2) Hold the metal mounting plate in the desired location (with the tabs facing out). Mark your screw holes with a pen, then place the screws and secure the mounting plate evenly on the wall.
- 3) Align the 3 mounting sockets on the backside of the unit with the mounting plate and carefully slide the unit down into place until it feels secure.
- 4) Turn off your home's cold water and hot water supply faucet, if you have not already.
- 5) Turn your washing machine settings to "COLD" water only and run the washing machine for a few minutes to help remove excess water and pressure from the cold water hose.

INSTALLATION (Cont.)

6) Remove your existing hose from the cold water faucet but keep the hose attached to your washing machine. Attach the other end of your existing hose to the water "OUTLET" on the NatureWasher (See the product diagram on page 8). Do NOT overtighten. Just make sure the fit is secure.

Note: Make sure your existing hose is in good, functional condition. Replace the hose if it appears worn out.

7) Attach the hose included with the NatureWasher to the water "INLET" on the unit. Attach the other end to the cold water faucet. Tighten both ends of the hose, but be careful not to overtighten.

8) The final hose to attach is the auxillary hose. This hose allows you to extract the powerful oxidized water from the NatureWasher so that it can be used for other cleaning and disinfecting tasks beyond the laundry! Attach this hose to the "HOSE OUTLET."

9) Slowly turn your home's cold water supply faucet back on. Make sure there is no leaking from any of the cold water hose lines.

10) Plug in the DC adapter to the NatureWasher, then plug into the power outlet. The installation is now complete and your NatureWasher is ready to use.

Note: Before running your first load of laundry with your NatureWasher, we suggest following the "Washing Machine Cleaning Instructions" listed on pages 4 and 5 of this user manual.

INDICATOR LIGHTS



The Indicator light can be viewed through the window on the front of the NatureWasher. This LED light has two states of operation :

A **BLUE** light indicates the normal operating condition.

A flashing **RED** light indicates that the oxidizing module is not operating properly. If a red light is illuminated, please try to reset the unit by unplugging it for 10-12 minutes to reset the oxidizing module.

If a red light indicator persists, contact our customer support team by visiting our website www.naturewasher.com

OTHER USAGE NOTES

Daily Use of NatureWasher

The use of NatureWasher is very easy after proper installation. Simply operate your washing machine according to the manufacturers instructions on a cold water setting only for best results.

Non-Use or Vacation Care

If you are on vacation or won't be operating your NatureWasher for an extended period of time, we recommend that you unplug the power supply to the washing machine and NatureWasher and turn off your water supply valve. This will help to avoid accidental flooding due to water pressure surge while you are away.

Stains

We suggest that you pre-treat stains as you normally would when doing laundry. No laundry detergent is required for normal to moderately soiled garments. For heavily soiled garments, we suggest adding an extra rinse cycle to the wash load according to your washing machines settings.

AUXILIARY HOSE FEATURES

Take the Purifying Power of NatureWasher Beyond the Laundry Room with New Auxiliary Hose Attachment!

NatureWasher doesn't stop at your clothing, towels and linens! Now equipped with an optional auxiliary spray hose attachment, you can now easily extract powerful, oxidized water from your NatureWasher to fight odors, stains and bacteria right at the source! Simply attach the included hose to activate an on-demand cleaning solution. From floors to countertops, NatureWasher creates an exciting, fun, and easy to use way to transform your cleaning routine!

1) Use NatureWasher to Clean Your Carpets!

Use the auxiliary hose on your NatureWasher to fill your carpet extractor with powerful oxidized water to help lift stubborn dirt and stains from your carpets and rugs.

2) Use NatureWasher to Clean Your Hard Floors!

Fill your mop bucket or electronic floor cleaner with water from your NatureWasher to break down grime, clean up after spills, and leave your floors sparkling!

3) Use NatureWasher to Clean Surfaces!

From countertops, to door handles - these commonly touched surfaces are crawling with germs! Dedicate an empty spray bottle and fill it with water from your NatureWasher to spray and wipe these surfaces to fight bacteria!

4) Use NatureWasher to Clean Your Food Items!

Did you know most store-bought produce items contain traces of pesticides and preservatives that can be potentially harmful to your health - and to the taste of your food! Give your fresh fruits, veggies and meats a quick spray bath from your NatureWasher to remove these chemicals for healthier and tastier eating!

Note - *Because the potency of the oxidized water generated by the NatureWasher has a limited "shelf life", the auxiliary hose feature included with your NatureWasher should be treated as an "on-demand" cleaning tool and used within 30-45 minutes for the highest ozone concentration and best results.*

FREQUENTLY ASKED QUESTIONS

Will NatureWasher work with my washing machine?

NatureWasher can be used with almost any residential style washing machine. It is not intended for use on industrial style machines.

Does NatureWasher work with all water types?

NatureWasher will work with both standard city water, hard or well water supplies. However, better water quality will yield the best results. If you have hard water, we suggest to install a water softener for improved water quality and mineral filtration.

Is NatureWasher safe?

We put your health and safety first! NatureWasher and its purification technology are perfectly safe to use for your laundry, as well as a multitude of other cleaning tasks in your home or small business. In fact, similar technology as been used for decades by hospitals and other institutions for laundry and other disinfecting uses!

Do tough stains need to be pre-treated?

While the NatureWasher is tough on dirt and stains, you may continue to treat stubborn stains with your method of choice. We also suggest setting your washing machine to an extra rinse cycle for an extra boost of clean!

Why do I need to use cold water?

During regular operation, NatureWasher generates powerful cleansing molecules to destroy odors, lift dirt and destroy germs without the use of hot water or detergent. This generated cleaning agent is most powerful when combined with cold water, as warm temperatures can cause ozone levels to rapidly deplete.

What's that smell?

If you are smelling an aroma in your laundry room or washing area during regular operation, have no fear! This scent is generated by your NatureWasher and occurs as powerful cleansing molecules are combined with the water.

TROUBLESHOOTING

NatureWasher fails to power on -

If the NatureWasher does not show any signs of life after proper installation, it is likely due to power supply connection issue. Be sure to check the power cord for secure connection. Also double check to make sure that your cold water supply is turned to the on position to allow for proper water flow to the unit. Remember, the NatureWasher may not display the blue operating light until adequate water pressure is achieved. This can often take up to 1-2 minutes after you've began your wash load.

NatureWasher is displaying a flashing RED light -

A flashing red light is an indication of an issue with the ozone generator, or a leak has been detected.

If the LED light indicator is flashing **RED**, unplug your NatureWasher from power for 10-12 minutes to reset the unit and then try again.

If the LED light indicator continues to flash red after resetting, please contact customer service for further assistance.

NatureWasher is not emitting an ozone smell -

With proper installation, you should typically notice the aroma of ozone in your laundry room or near your washing machine during the wash cycle. If you do not smell ozone -

Check for an obstructions in the connections between the NatureWasher and the washing machine which could hinder water flow such as a pinched or twisted hose line.

If you believe there is a further ozone related issue, please unplug your NatureWasher and contact our customer support team at 800-599-5191.

Appearance of Suds in the Wash Basin -

While NatureWasher requires no detergent, it is common to still see suds in the wash basin occasionally due to detergent build-up in your laundry. These suds will diminish as the NatureWasher breaks down the chemicals.

PRODUCT SPECIFICATIONS



Product Name - NatureWasher-O3

Model Number - NW-O3

Power Input - AC 100-240V / 50-60 Hz

Power Output - DC 12V 3A / 36 W

Water Pressure - 20 PSI - 100 PSI

Water Flow - 3.5 - 8 L / Minute

Ozone Concentration (in Water) 1/2 mg / L

Product Dimensions - 9.44 x 7.3 x 2.5 inches

Product Weight - 2.7 lbs

WARRANTY INFORMATION

To register your NatureWasher warranty, please fill out the included warranty card, or fill out our online registration form at www.naturewasher.com/register

Verified purchases are warranted to be free from all defects in material and workmanship in normal household use for a period of one (1) year from the date of purchase.

The warranty is granted to the original purchaser, or original receiver of the unit. The warranty is subject to the following provisions: any damages or malfunctions caused by negligence, abuse or unauthorized service are not covered.

Toth Healthy Home Products (Official Distributor of NatureWasher) will, at its option, repair or replace a defective NatureWasher or NatureWasher part that is covered under this warranty. Unless the warranty is renewed or extended with company authorization, any repaired or replaced part of the unit shall be warranted for the remaining unexpired portion of the original warranty period. As a matter of return policy, refunds will only be given within the first 30 days after purchase.

For questions regarding your NatureWasher, please call 888-234-8425, or visit our website at www.naturewasher.com